

WS Series® Triplex Control Panel

The WS Series® Triplex control panels will control three pumps in sewage, wastewater, and dewatering applications. All panels are UL Listed for the United States and Canada and come with a five-year warranty.

Model	FLA Range
WT3P-6-1	(1.0-1.6 FLA)
WT3P-6-2	(1.6-2.5 FLA)
WT3P-6-3	(2.5-4.0 FLA)
WT3P-6-4	(4.0-6.3 FLA)
WT3P-6-5	(6.0-10.0 FLA)
WT3P-6-6	(9.0-14.0 FLA)
WT3P-6-7	(13.0-18.0 FLA)
WT3P-6-8	(17.0-23.0 FLA)
WT3P-6-9	(20.0-25.0 FLA)
WT3P-6-10	(24.0-32.0 FLA)

Enclosure Mounting: NEMA 4X RATED

Mounting Brackets - A mounting bracket and screw pack are provided with the premium enclosures. To assemble, turn the enclosure upside down on a flat surface, place the mounting bracket over the square boss either horizontally or vertically, and fasten the mounting bracket with the 1/4"-20 x 0.5 SS, countersunk phillips drive screws or vertically, with the mounting brackets in any config., using any acceptable fastening technique.

Covers/Doors - Covers/doors have a gasket pre-assembled to seal against the base.

Note: The control panel should not be mounted in a location that may be subject to submersion.

Panel Installation:

1. Caution: To maintain the NEMA 4X rating, make all wiring connections with seal tight cable grips or conduit connections.
2. Run pump cables and floats cables through conduit. Make field connections as shown on wiring schematic.
3. Run power line conductor through conduit. Wire to terminals per enclosed schematic.
4. Branch circuit protection to be provided by installer.
5. Panel circuit breakers are closed.
6. Floats are properly mounted at the correct levels.
Note: Floats shall have free range of motion without touching each other or other equipment.
7. Connect service conductors 208/240/480V to proper location.




www.seewaterinc.com
951.487.8073 • 888.733.9283 • info@seewaterinc.com
22220 Opportunity Way, Suite 101 • Riverside, CA 92518

Sequence of Operation:

1. When the 'Stop' and 'Lead' float contact closes, pump #1 will energize and the pump #1 run light will illuminate. Pump #1 will remain operational until the 'Stop' float opens.
2. The next time the 'Stop' and 'Lead' floats are closed the automatic pump alternation circuit will energize the next pump in rotation and the pump run light will illuminate. The pump will remain operational until the 'Stop' float opens.
3. If the fluid level continues to rise after the first pump has been energized, the 'Lag' float will close. When the 'Lag' float has been closed, the second pump will turn on. Both pumps will remain operational until the 'Stop' float opens.
4. If the fluid level continues to rise after the second pump has been energized, the 'Lag-Lag' float will close. When the 'Lag-Lag' float has been closed, the third pump will turn on. All pumps will remain operational until the 'Stop' float opens.
5. If the level continues to rise, the 'High' float will alarm. This will illuminate the 360-degree visible beacon and sound an 85 decibel at 10' buzzer.

Remote Monitoring Dry Contacts:

- Normally Open dry contacts for low level, high level, pump #1 run, pump #2 run, pump #3 run, pump #1 fault, pump #2 fault, and pump #3 fault.
- Note:** Refer to wiring schematic for proper termination.

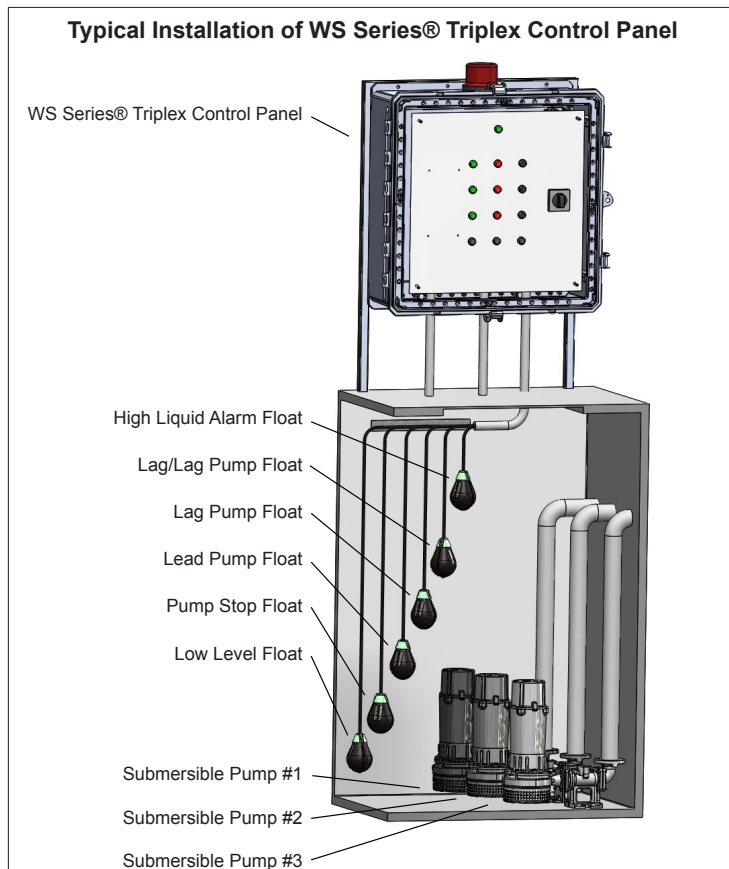


Additional Panel Options:

24 = Pump Exerciser

- Auto cycles pumps daily, weekly or monthly

Run Time Options:

- Position A: 1s (DIP Switch 1, 2, and 3)
- Position B: .75s
- Position C: 1s
- Position D: 8s

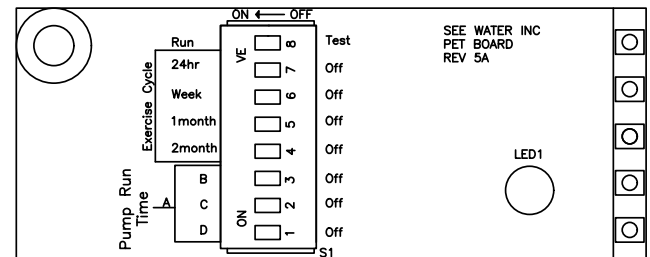

- 28 = Power On Dry Contact (Normally Open)
- 3R = Painted Steel Enclosure
- AF = Alarm Flasher
- AH = Anti Condensation Heater
- C = Additional Cord Length Per Foot Per Component*
- CCT = Cycle Counter w/ LCD Display & Reset
- CO = Convenience Outlet (User to supply 120 VAC)
- ETT = Elapsed Time Meter w/ LCD Display & Reset
- GR = Generator Receptacle, Includes Transfer Switch
- IST = Intrinsically Safe
- LAD/ = Lightning Secondary Surge Arrestor
- LAW (LAD Delta / LAW Wye)
- MD = Main Disconnect; Up to 100.0 FLA
- MD2 = Main Disconnect; 100.0 to 230.0 FLA
- PM = Phase Monitoring
- PX = Pump Portal® Wireless Remote Communication
- SFT = Seal Failure Circuit w/ Indicator Lights
- ST = Upgraded Enclosure (Stainless Steel)
- S3 = No Floats Option

*Additional cord length greater than 20': Specify after C.
Example: WT3P-6-4-C50. Indicates 50' cord lengths for all floats.



www.seewaterinc.com
951.487.8073 • 888.733.9283 • info@seewaterinc.com
22220 Opportunity Way, Suite 101 • Riverside, CA 92518

